



BASEMENT WINDOW SYSTEMS


Retro-Fit Section

Welcome to the Retro Fit Install Section




ALERT: BEFORE STARTING A WINDOW RETRO FIT, CONTACT LOCAL MUNICIPALITY FOR PERMITS.


Excavate area for window installation. Remove dirt all the way to foundation's footings, making well install easier.

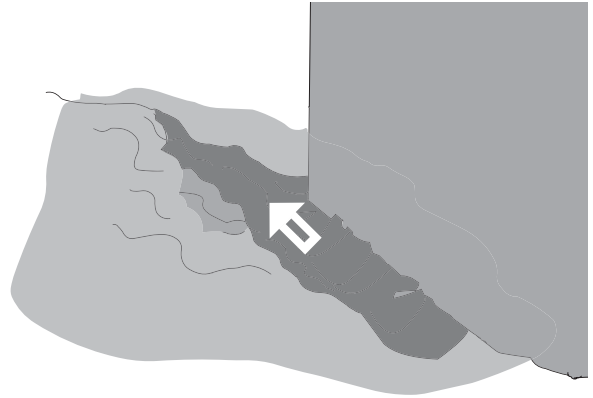


Whether using a contractor or cutting the hole yourself, outline a square on the wall that is $3\frac{1}{2}$ " bigger all the way around the window. Make sure lines are square and 90° .

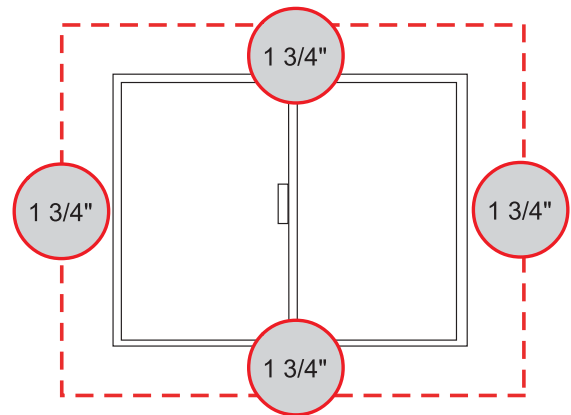

Cut and remove the piece out of the wall.

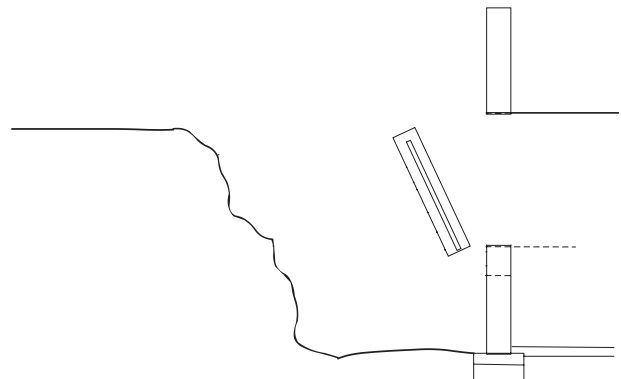


Using womanized lumber, build a frame for the window to sit in. Secure the wood using silicone. Once silicone is dry use concrete fasteners to secure lumber properly.

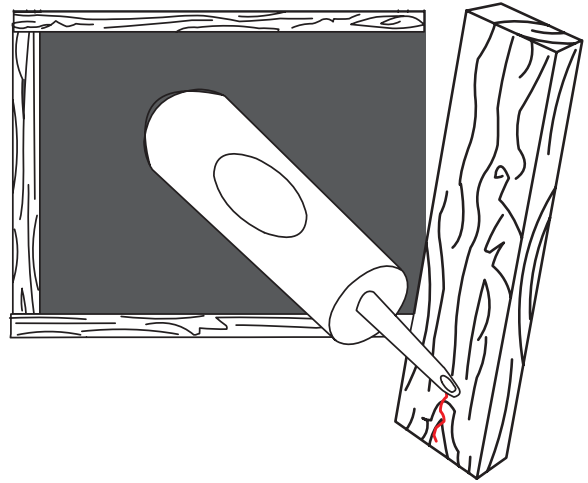

Anchor locations. Fasten into concrete opening with concrete fasteners.

Place window in lumber frame preparing each inside edge first with silicone.

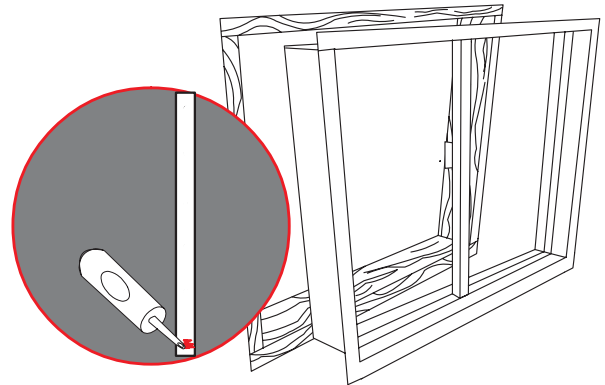

Using 1½" galvanized screws, continue securing windows in wood frame using the holes provided on window frame.

